



Rotary Dampers

WRD 101

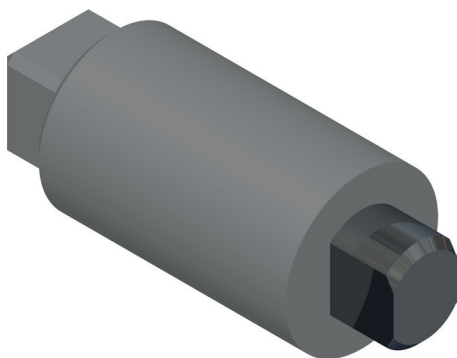

ONLINE
Calculation and
2D / 3D CAD Download

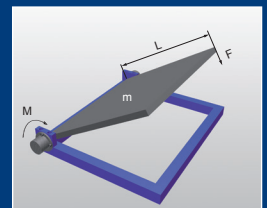

Benefits

Applications:

- Mechanical and plant engineering
- Vendingmachines, Counters
- Car industry and sanitary industry

Material:

- Plastic and Alu die cast

Temperature:


- Standard: -5°C - +50°C

Damping:

- Controlled deceleration of rotary motion
- Torque up to 0,004 Nm
- clockwise or anti-clockwise

RoHS-compliant:

- Directive 2002/95/EG

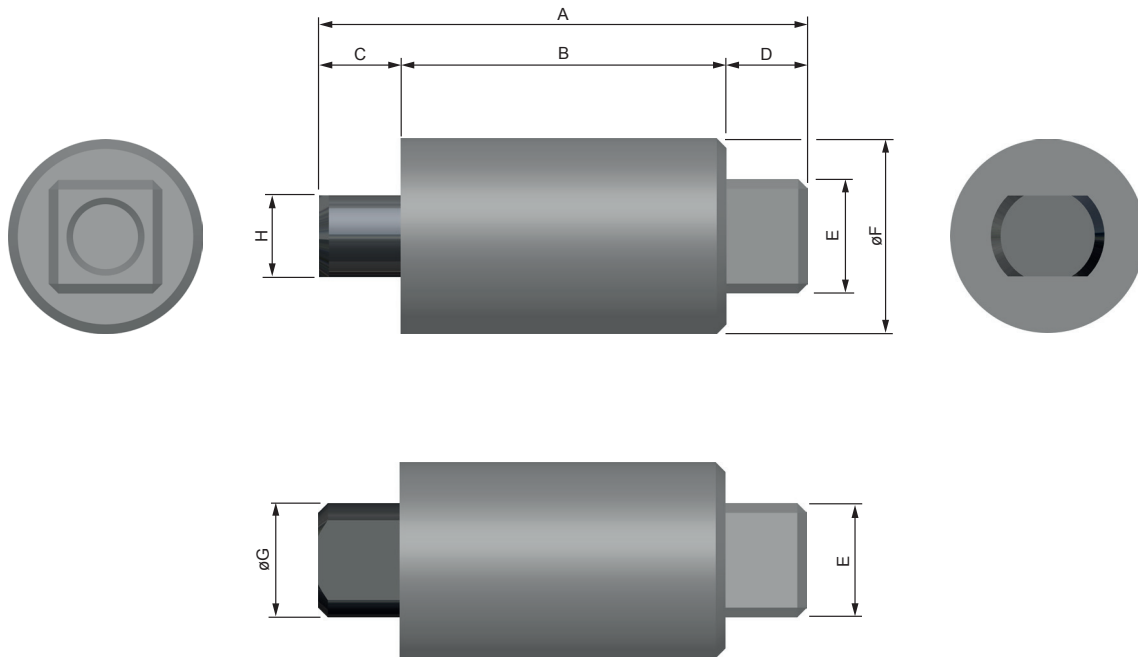

DIMENSIONS

	A	B	C	D	E	øF	øG	H
		-0.2	-0.3	-0.2	-0.2	-0.2	-0.2	-0.2
	mm	mm	mm	mm	mm	mm	mm	mm
WRD 101	15	10	2.5	2.5	3.5	6	3.5	2.5

TECHNICAL DATA

	Torque	Working temperature	Material	Damping direction
	Nm	°C		
WRD 101 - C25	0.0025	0 - 40	Plastic	clockwise - anti-clockwise
WRD 101 - C40	0.004	0 - 40	Plastic	clockwise - anti-clockwise

Important Information

Temperature

WRD: -5 °C - +50 °C

Reference temperature for all technical information: 20°C

At higher temperatures the energy absorption or torque is reduced.

Mount the rotary damper at the intended bores and flats. Rotary Dampers may not be statically loaded or thermally fixed.

Rotary damper can not be used with aggressive fluids.

Adjustment

If the mass in a trial run impacts excessively hard on the end position select the next model with higher torque for the series WRD 101.

If the mass don't reach the end position or the time is too long select the next model with lower torque for the series mentioned above.

Rotary dampers should under no circumstance be loaded over the damping angle mentioned in the catalogue.

We reserve the right to make changes without further notice!

Fundamentals

Rotary dampers may under no circumstances be:

-painted



-welded



-held with clamps



The products must be protected against contamination, fluids and air pressure. We offer special solutions for these applications. When rotary dampers are used parallel the size of the model and the used degree of hardness / used adjustment has to be the same. The load has to be distributed equally. When a shock absorber is used for an emergency case, an external end stop must be provided. If the absorption should be insufficient, please contact Weforma or the respective representation. You will find further technical informations to the series in our catalogue.